


Godox



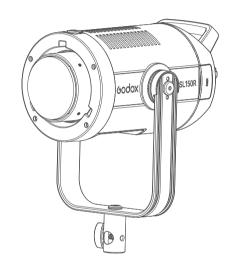

Wechat Official Account 神牛微信公众号

深圳市神牛摄影器材有限公司

GODOX Photo Equipment Co.,Ltd.

Add.: Building 2, Yaochuan Industrial Zone, Tangwei Community, Fuhai Street, Bao'an District, Shenzhen 518103, China Tel: +86-755-29609320(8062) Fax: +86-755-25723423 E-mail: godox@godox.com

www.godox.com



SL150 R

RGB LED 摄影灯 RGB LED Video Light

> 使用手册 Instruction Manual

Safety Instructions and Attentions

First of all, as the most basic principle: This product is a professional lighting set equipment and should be used by professional lighting engineers or under the guidance of professionals. Basic safety attentions must always be followed during use, as follows:

- 1. Before use, please read and understand these instructions and attentions.
- Professional lighting is prohibited for children. When children are near, parents or accompanying persons must supervise closely to prevent children from personal injury due to collision with lamps or private use of lamps.
- 3. This lighting product is not ordinary lighting product and cannot be used for general lighting.

 Anyone who has suffered eye damage or has sensitive eyes should avoid using this product.
- 4. When the lamp is on, it must be used with care. Do not touch high-temperature parts, such as LED lamp beads, to avoid burns.
- 5. When the lamp is on, it is forbidden to look directly at the lamp beads under any circumstances. Strong light should be used under the guidance of professional lighting engineers. Avoid prolonged exposure to strong light under any circumstances. If eye discomfort, please turn off the lamp in time, suspend use, and see a doctor immediately.
- If the lamp bead is damaged or deformed by heat, stop using this equipment, and contact the manufacturer, service agent or qualified maintenance personnel to replace the lamp bead in time to avoid accidents.
- 7. This product is only suitable for use in -10°C to 40°C operating environment and normal humidity environment.
- 8. Do not use damaged equipment or accessories, and wait for professional maintenance personnel to check and repair to confirm being normal before use
- During using, if the casing of this product is broken due to being dropped, squeezed or subjected to strong impact, please do not use it, so as to avoid electric shock injury due to contact with internal electronic components.
- 10. If an extension cord is required, please use an extension cord with a current rating greater than or equal to that of the equipment. If an extension cord is rated less than the equipment, overheating may result.
- 11. Some products have long power cords, please place the power cords properly and keep them in a safe place. Avoid contacting the power cord with overheating surfaces, avoid improper placement that could cause pulling damage, or trip on-site personnel. Please use the certified power cord from the original manufacturer. If the product is damaged by using a non-certified power cord, it will not be repaired by our factory.
- 12. Be sure to unplug equipment from the power outlet before cleaning and repairing. When not in use, do not pull the power cord to unplug the equipment. For normal power-off, please hold both ends of the plug of the equipment with your hands and pull the plug out of power outlet. This equipment needs to be connected to a grounded outlet.
- 13. This equipment is not waterproof, please keep it dry and do not immerse it in water or other liquids. The equipment should be installed in a dry and ventilated place, and avoid using it in rainy, humid, dusty or overheated environments. Do not place any objects on the lamp or let liquid flow into the lamp to avoid accidents.
- 14. Do not disassemble the product without permission. If the product fails, it must be checked and repaired by authorized maintenance personnel.
- 15. Before storing, make sure that the equipment has cooled down completely. For storage,

- unplug the power cord from the equipment, The equipment should be placed in the carrying case or in a ventilated dry place.
- 16. Do not place equipment near flammable and volatile solvents such as alcohol and gasoline.
- Do not use accessories that are not recommended by our factory to avoid fire, electric shock or personal injury.
- 18. When cleaning, do not wipe it with a damp cloth, please use a dry cloth or a soft cloth to wipe the dirt of the equipment.
- 19. Please take off the protective cover before using,
- 20. This product complies with ROHS, CE, and FCC certification, please refer to the relevant national standards for use and operation.
- 21. The safety instructions are formulated according to the strict testing of the factory, and the design and specifications of the equipment are subject to change without prior notice. For latest product information, please check the GODOX website and view latest electronic instruction.
- 22. Some products have built-in lithium batteries. Please use specified chargers, and use them within a proper range of the specified voltage and temperature according to the correct operating instructions.
- 23. Some products are battery powered. Do not use any batteries, power sources or accessories not specified in the instructions for such products. Keep batteries and other accessories us of the reach of children and infants. In the instance that a child or infant swallows a battery or accessory, immediate emergency medical attention is required. If the battery leaks, becomes discolored, deformed, emits smoke, or emits an abnormal odor, remove it immediately. Be careful during removal to avoid burns. Continued use could result in fire, electric shock, or burns. Do not use any deformed or modified batteries. Do not disassemble or modify this product or battery. Do not heat or solder the battery. Keep the battery away from fire or water. Do not incorrectly insert the positive and negative ends of batteries, or mix old and new batteries or batteries of different types together.
- One-year warranty period, accessories such as consumable batteries, adapters, power cords, etc. are not covered by this warranty.
- 25. If it is found that the equipment is repaired without authorization, the one-year warranty period will be cancelled and relevant fees will be charged for maintenance.
- 26. Machine failures caused by non-standard operation are not covered by the warranty.

keep these instructions!

Foreword

Thank you for purchasing!

Introducing the new RGB LED Video Light SL150 R from Godox. You can easily adjust the CCT/HSI/RGB/GEL/FX modes via remote control (sold separately) or the "Godox Light" app. For those who prefer using a control console, simply purchase a connection cable to connect to the RJ45 interface to control the lighting fixture. The SL150 R has 7 different DMX modes. Additionally, the SL150 R supports a silent mode where the fan can be turned off, which is ideal for shooting in quiet environments such as interviews, theater stages, TV sets, photography studios, and outdoor shooting.


Main Features

- · Wide CCT range freely adjustable from 2500K to 10000K.
- Three ways of controlling: Bluetooth app/2,4G wireless/DMX512 control
- . HSI mode with 36000 colors and 360° color gamut.
- . GEL mode with 60 popular color filters for choice.
- . BGBW mode with mixed four colors
- 14 FX modes: RGB cycle, laser, flash, lightning, cloudy, broken bulb, TV, candle, fire, firework, explosion, welding, police car and SOS.
- · Mute mode (fan off) suitable for strictly quiet shooting scenes,
- The U-type bracket can be rotated through 360°, granting a lot of flexibility for lighting.

Warning

- ▲ Always keep this product dry. Do not use in rain or in damp conditions.
- ▲ Do not disassemble. Should repairs become necessary, this product must be sent to an authorized maintenance center,
- A Keep out of reach of children.
- ▲ As this product is not waterproof, do not use in rain or in damp conditions.
- ▲ Do not leave or store the product if the ambient temperature reads over 40°C.
- ▲ Do not use the product in the presence of flammable gas. In certain circumstance, please pay attention to the relevant warnings.


Name of Parts

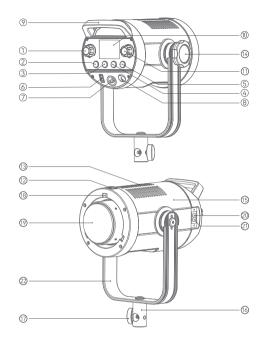

- 1. FN Dial
- 2. Wireless Button
- 3, MODE Button
- 4. DMX Button
- 5. Fan Button
- 6. USB Upgrade Port
- ---
- 7. Input Port
- 8. Power Switch 9. Handle
- 10. Display
- To. Diopidy
- 11. DIM Dial
- 12. Accessory Locking Ring
- 13. Thermovent
- 14. Bracket Screw
- 15. Light Body
- 16. Sleeve
- 17. Fixing Knob
- 18, Bowens Mount
- 19. Softbox
- 20. RJ45 Interface 1
- 21 B.145 Interface 7
- 22, U-type Bracket

13

What's Inside

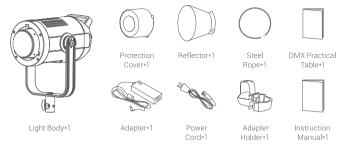

Note: Due to continuous updates and upgrades of the products, there may be differences between the actual products and the pictures. Therefore, the pictures are for reference only, products to prevail in kind.

Optional Accessories

The product can be used in combination with the following optional accessories so as to achieve best photography effects: remote control RC-R9II, softbox, umbrella, light stand.











Connect to DMX Controller



Power Switch

Toggle the power switch after connected to AC power supply with the adapter to turn on the device.



Mute Mode

Short press the fan button to turn on the fan, the consult incomplete incompl

The brightness range of the CCT/GEL/FX mode is from 0% to 30%.

The brightness range of the HSI/RGBW mode is from 0% to 70%.




Mode Selection

Short press the MODE button to enter mode selection, turn the FN dial to select the desired mode, then short press the FN dial to enter mode settings.

1. CCT Mode

Short press the FN dial in CCT setting interface to select CCT adjustment (from 2500K to 10000K) or GM adjustment (from -50 to +50). Turn the FN dial to the left once to decrease the CCT value by 100K or the GM value by 1 unit, and turn it to the right once to increase the CCT value by 100K or the GM value by 100K or the GM value by 1 unit, with quick adjustment available.



2. HSI Mode

Short press the FN dial in HSI setting interface to select H (hue, adjustable from 0" to 360") or S (saturation, adjustable from 0% to 100%). Turn the FN dial to the left once to decrease the hue value by 1 unit or the saturation value by 1 unit, and turn it to the right once to increase the hue value by 1 unit or the saturation value by 1 unit, and turn it to the right once to increase the hue value by 1 unit or the saturation value by 1 unit, with quick adjustment available.



16

3. RGB Mode

Short press the FN dial in the RGB setting interface to select R (red)/G (green)/B (blue)/W (white) (adjustable from 0 to 255). Turning the FN dial to the left once can decrease the value by 1 unit, while turning the FN dial to the right once can increase the value by 1 unit, with quick adjustment available.

4. GEL Mode

Short press the FN dial in the GEL setting interface to select Gel Type/Gel NO./CCT value, then turn the FN dial to adjust settings.

There are 30 types of R-GEL: 02, 12, 16, 17, 21, 26, 33, 37, 44, 47, 51, 60, 62, 65, 80, 88, 89, 92, 93, 99, 378, 2001, 2006, 2007, 2008, 3304, 4415, 4630, 4660 and 4690.

There are 30 types of L-GEL: 002, 007, 008, 010, 013, 036, 048, 063, 075, 089, 108, 110, 115, 117, 124, 128, 131, 134, 148, 153, 156, 165, 169, 182, 196, 243, 244, 701, 723 and 724.

CCT value adjustable range: 3200K or 5600K.

5. FX Mode

Short press the FN dial in the FX setting interface to select effect type (14)/speed value. Turn the FN dial to adjust the settings.





Note: More GEL types are available in the "Godox light" APP.



FX Table

NO.	FX Icon	FX Type	Option	Adjustable Range	
1	4	RGB CYCLE	SPD	1-100	
2	Ø:	PARTY	SPD	1-100	
3	++	FLASH	SPD	1-100	
4	9	LIGHTNING	FLICKERS	RANDOM/1-10	
			FREQ	RANDOM/2-20	
5	₫:	CLOUDY	SPD	1-100	
6	ô	BROKEN BULB	SPD	1-100	
7	ŤV	TV	SPD	1-100	
8	2	CANDLE	SPD	1-100	
9	*	FIRE	SPD	1-100	
10	- 46	FIREWORKS	SPD	1-100	
11	*	EXPLOSION	SPD	1-100	
12	*	WELDING	SPD	1-100	
13	-	POLICE CAR	COLOR	R+B, R, B, B+W, B+Y, Y, R + B+W, R+Y+B	
			MODE	1-5	
14	SOS	SOS	CCT	2500K-10000K	

DMX Setting

Short press the DMX button to enter DMX setting interface, turn it to select DMX (address)/MODE (DMX mode)/LOST (DMX lost). Turn the FN dial to adjust the settings.

Option	Adjustable Range	Description		
DMX (DMX address)	OFF/1-512	Initial address		
MODE(DMX Mode)	CCT 8BIT	CCT 8BIT mode		
	HSI 8BIT	HSI 8BIT mode		
	RGBW 8BIT	RGBW 8BIT mode		
	CCT&HSI 8BIT	CCT&HSI8BIT mode		
	CCT&RGBW 8BJT	CCT&RGBW 8BIT mode		
	FX 8BIT	FX 8BIT mode		
	GEL 8BIT	GEL 8BIT mode		
LOST (DMX Lost)	KEEP ON	After the DMX control signal is lost, continue to use the last		
		received DMX control signal until power down or a valid DMX		
		control signal is received again.		
	BLACK OUT	The light is off immediately.		
	BLACK OUT AFTER 2 MIN	After the DMX control signal is lost, continue to use the last		
		received DMX control signal for 2 minutes then black out.		
		Note: If a valid DMX control signal is received within 2 minutes,		
		then use the new DMX control signal.		

Note: Please refer to the "SL150 R DMX Practical Table" to control the device by DMX. The electronic version can be downloaded from the official website https://www.godox.com.cn

2.4G Wireless Setting

Short press the wireless button to enter wireless setting, short press the FN dial to select CH/GR/ID/Bluetooth reset, then turn the DIM dial to adjust settings or reset.

CH: 32 channels (1-32). GR: 16 groups (A-F/0-9). ID: OFF/99 IDs (1-99).

Bluetooth Reset: simply turn the DIM dial, the interface will display "RESET" to indicate that the reset is in progress. Once the reset is complete, the screen will display "DONE" and automatically return to the wireless setting interface.

Bluetooth MAC code: below the Bluetooth reset, for the purpose of pairing.

MENU		NO.:V0.3			
сн 12	GR 1	18			
	RESET				
		MAC:3737			

Note: The 2.4G wireless is on by default. When using remote control RC-R9II, the CH, GR and ID of which should be the same with the light body.

"Godox Light"App

Scan the QR code to download "Godox Light" app (both Android and iOS systems are available).

Note: The Bluetooth is on by default. The app can be used directly on the firstly installed device (smartphone or tablet). When changing to other mobile device, the light shall be reset before the normal usage of the app. The app should be V3.0 or above.



Firmware Upgrade

- Download the new firmware to the U disk from official website (https://www.godox.com/firm ware-continuous-light).
- 2. Turn off the device, Insert the U disk with new firmware into the USB upgrade port.
- Turn on the device, and it will automatically enter the upgrading interface. It will return to main interface after completion.

Notes:

- New firmware must be downloaded from the official website, and keep only one BIN file in the root directory of the USB disk.
- 2. The USB port can only support firmware upgrade function.



Illuminance Data

ССТ	Testing Condition	Unit	1m	2m	3m
2500K	D. P. L.	lux	≈2910	≈750	≈340
	Bare light	fc	≈271	≈69.7	≈31.6
	With reflector	lux	≈20000	≈4630	≈1970
	With reflector	fc	≈1850	≈430	≈183
	Bare light	lux	≈3360	≈871	≈394
3200K	bare light	fc	≈312	≈80.9	≈36.6
3200K	With reflector	lux	≈22900	≈5300	≈2260
	with reflector	fc	≈2130	≈493	≈210
	Bare light	lux	≈3870	≈996	≈453
4300K	bare light	fc	≈359	≈92.5	≈41.2
4300K	With reflector	lux	≈26200	≈6050	≈2580
	WithTellector	fc	≈2430	≈562	≈240
	Bare light	lux	≈3860	≈1000	≈458
5600K	- Daie light	fc	≈359	≈93	≈42.6
3000K	With reflector	lux	≈26000	≈6030	≈2570
	WithTellector	fc	≈2420	≈560	≈238
	Bare light	lux	≈3590	≈942	≈432
6500K	Date light	fc	≈334	≈87.5	≈40.1
0300K	With reflector	lux	≈24300	≈5620	≈2410
	WithTellector	fc	≈2250	≈522	≈224
	Bare light	lux	≈3580	≈940	≈430
8500K	- Barc light	fc	≈333	≈87.3	≈39.9
0300K	With reflector	lux	≈24300	≈5600	≈2400
	With tollector	fc	≈2260	≈520	≈223
	Bare light	Jux	≈3360	≈880	≈401
10000K	Dure light	fc	≈312	≈81.8	≈37.3
100001	With reflector	lux	≈23000	≈5260	≈2260
	Will reflector	fc	≈2130	≈489	≈210

Note: The above data are average values instead of absolute values. All the above tests are based on the condition of 100% brightness.

19 20

Illuminance Data

Model	SL150 R		
Power Supply	36V=4.6A		
Input Power	Max.≈165W		
ССТ	2500K-10000K		
Brightness Range	0%-100%		
FX Type	14		
CRI	Average≥95		
TLCI	Average≥96		
СН	32 (1-32)		
GR	16 (A-F, 0-9)		
ID	99 (1-99)		
Mode	CCT mode/HSI mode/RGBW mode/GEL mode/FX mode		
Controlling Method	2.4G wireless control/DMX 512 control/Bluetooth control/light body control		
2.4G Controlling Distance	Max. 50m		
Bluetooth Controlling Distance	Max. 30m		
U-type Bracket Adjustable Angle	360°		
Working Environment Temperature	-10°C~40°C		
Dimension (including U-type bracket)	288mm*199mm*283mm		
Net Weight (including U-type bracket)≈	2.35kg		

Specifications and data may subject to changes without notice.

FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -Reorient or relocate the receiving antenna.
- -Increase the separation between the equipment and receiver.
- -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- -Consult the dealer or an experienced radio/TV technician for help.
- The device has been evaluated to meet general RF exposure requirement,
- The device can be used in portable exposure condition without restriction.

Warning

Operating frequency:2412.99MHz = 2464.49MHz(2.4G only receive)/2402MHz = 2480MHz (BT) Maximum EIBP Power: 5dBm

Declaration of Conformity

GODOX Photo Equipment Co.,Ltd. hereby declares that this equipment are in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU. In accordance with Article 10(2) and Article 10(10), this product is allowed to be used in all EU member states.For more information of DoC, Please click this web link:

https://www.godox.com/eu-declaration-of-conformity/

The device complies with RF specifications when the device used at 0mm from your body.